




Cricut Color™
(marker instructions)

Instructions come in each set of markers ----in a small pamphlet

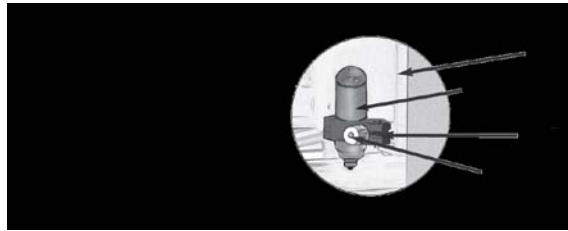

Installation Instructions

Open machine doors.1. The ink assembly fits into the black cradle to the left of the 2. car. Locate the silver screw and turn it counter-clockwise until it loosens enough that you can swing the screw to the right (figure 2). Be careful not to loosen the screw too much, or it will fall out. Remove cap from ink assembly.

Open the left arm of the black cradle and position the 3. ink assembly inside, as shown. Close the cradle, swing the screw back to the left, and tighten it by turning it clockwise. Tighten gently to avoid cracking the assembly (figure 3). Plug the machine in and press the ON button to place the ink assembly in drawing position.

Operating Instructions

You can easily draw and cut any character you normally cut with your Cricut machine.

Please follow these steps:

Unload mat from machine or turn machine on. 1.

Replace the blade housing with a Cricut Color™.2.

Place paper on mat and load paper.3.

Do not move or adjust the location of the Cricut Color™ 4. on the paper.

The Cricut Color™ must begin in its starting position. a.

Choose the character(s) you would like to draw.5.

Adjust your machine to the following settings: 6.

Speed = 3

Pressure = 2

Choose the size of the character you would like to draw.7.

Press the 8. **CUT** button.

Note: When Cricut Color™ is in the machine, the a. **CUT** button will cause the machine to draw rather than cut.

When the machine has stopped, press the 9. **Load Paper** button. Do not unload paper!

Pressing the a. **Unload Paper** button will cause the drawn image and the cut image to be misaligned.

The b. **Load Paper** button will return the mat and paper to its original position.

Without moving the gray carriage, remove the Cricut 10. Color™ and replace it with the blade housing.

Adjust your machine and blade to the settings appropriate 11.for the medium you are cutting.

Press the 12. **Repeat Last** button.

Press the 13. **CUT** button.

Press the 14. **Unload Paper** button.

Remove medium from mat.15.

*Keep out of reach of children. Choking hazard. Leave cap on ink when not in use. Do not leave ink in machine when not in use.